Safe Solder Fume Extractors Model 40

User manual & filter change directions

IMPORTANT WARNING

Before opening unit for any reason UNPLUG the cord set from the power supply

Unit set up

- Unpack unit and inspect.
- Plug the unit into a 115V 15AMP power supply
- Turn the unit on with the switch on the side of the unit.
- The unit is ready for use

Replacing or cleaning the pre-filter

- Unplug the unit from the power
- The first filter nearest the intake is a pre-filter
- Simply lift pre-filter and remove. Insert new pre-filter and slide back into the unit.

Replacing the carbon filter

- Unplug the unit from the power
- Simply lift the carbon filterand remove. Insert new carbon filter and slide back into the unit.

Filter and fuse change diagram

Replacement parts

Pre-filter - **S2FP0412**
Carbon filter - **S2SF0500**

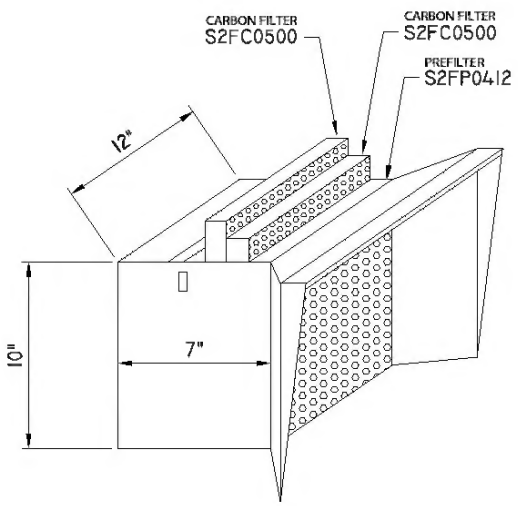

Unit wiring diagram

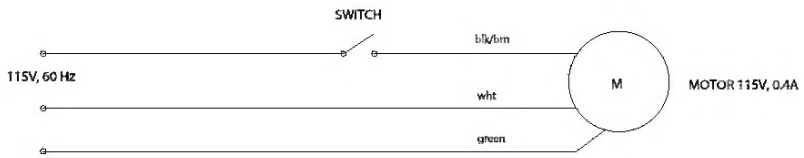

Call us 1-888-852-8247 www.allerair.net
Downloaded from www.Manualslib.com manuals search engine